

Manual to Magnum 260 / 390 Starcamp / Dorema

**This is only a shorter manual on how to erect the awning. Made by
Campingvaruhuset.se**


1. Drag the canvas beam into the caravan tent rail.
2. Start with poles A, glass fiber according to the picture
3. Then go with poles B, aluminium.
4. Adjust the tent so it is in square shape at the bottom, then hammer down the tent pegs. Only in the 4 corners, with 2 against the caravan wall and in the bottom corners on the front of the tent.
5. Place poles C according to the picture.
6. Hammer down the rest of the tent pegs.
7. Done!

Please notice that there are extra poles delivered that is for the Sun Canopy. They have a foot on one end and a small spike at the other. The Sun Canopy is when you put up one of the three front parts and place it straight out in the air, so it makes a Sun Canopy. Use these poles to mount in the front walls loopholes that are at the bottom of the front wall.

Do you have some questions? Please contact Campingvaruhuset and we will assist you.



Frame-tekening / Gestänge plan **Magnum 390**

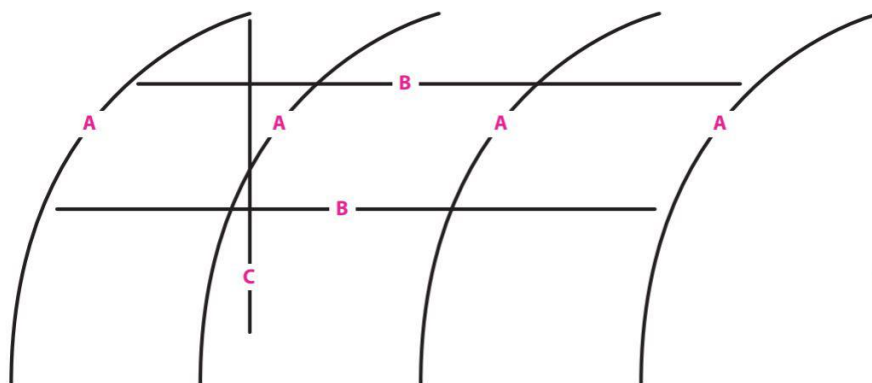

A	Fiberglass
B	Aluminium
C	Stahl